

68031K-MN

User Manual  
Notice d'utilisation  
Gebruiksaanwijzing

Ceramic glass  
induction hob  
Table de cuisson  
vetrocéramique à  
induction  
Glaskeramische  
inductie-kookplaat

**Dear Customer**

Thank you for choosing one of our high-quality products.

With this appliance you will experience the perfect combination of functional design and cutting edge technology.

Convince yourself that our appliances are engineered to deliver the best performance and control – indeed we are setting the highest standards of excellence.

In addition to this you find environmental and energy saving aspects as an integral part of our products.

To ensure optimal and regular performance of your appliance please read this instruction manual carefully. It will enable you to navigate all processes perfectly and most efficiently.

To refer to this manual any time you need to, we recommend you to keep it in a safe place. And please pass it to any future owner of the appliance.

We wish you much joy with your new appliance.

The following symbols are used in this user information:



Warning! This must be read! Important advice for the safety of persons and information on avoiding damage to the appliance



General information and advice



Information on environmental protection



Dangerous voltage

# Contents

Safety instructions	4
Description of the Appliance	6
Cooking surface layout	6
Control panel layout	7
Touch Control sensor fields	8
Displays	8
Residual heat indicator	8
Operating the appliance	10
Switching the appliance on and off	10
Setting the heat setting	10
Locking/unlocking the control panel	10
Switching the STOP+GO function on and off	11
Using the automatic warm-up function	11
Using the child safety device	13
Switching the power function on and off	14
Using the timer	15
Automatic switch off	18
Tips on Cooking and Frying	19
Cookware for induction cooking zones	19
Tips on energy saving	20
Examples of cooking applications	21
Cleaning and Care	22
What to do if ...	23
Disposal	25
<b>Installation Instructions</b>	26
Safety instructions	26
<b>Guarantee/Customer Service</b>	28
<b>Service</b>	29
<b>Assembly</b>	88
<b>Rating Plate</b>	91

# Operating Instructions



## Safety instructions

Please comply with these instructions. If you do not, any damage resulting is not covered by the warranty.

### Correct use

- This appliance is not intended for use by children or other persons whose physical, sensory or mental capabilities or lack of experience and knowledge prevents them from using the appliance safely without supervision or instruction by a responsible person to ensure that they can use the appliance safely.
- Do not leave the appliance unattended during operation.
- This appliance should be used only for normal domestic cooking and frying of food.
- The appliance must not be used as a work surface or as a storage surface.
- Additions or modifications to the appliance are not permitted.
- Do not place or store flammable liquids, highly inflammable materials or fusible objects (e.g. plastic film, plastic, aluminium) on or near the appliance.

### Children's safety

- Small children must be kept away from the appliance.
- Only let bigger children work on the appliance under supervision.
- To avoid small children and pets unintentionally switching the appliance on, we recommend activation of the child safety device.

### General safety

- The appliance may only be installed and connected by trained, registered service engineers.
- Built-in appliances may only be used after they have built in to suitable built-in units and work surfaces that meet standards.
- In the event of faults with the appliance or damage to the glass ceramic (cracks, scratches or splits), the appliance must be switched off and disconnected from the electrical supply, to prevent the possibility of an electric shock.
- Repairs to the appliance must only be carried out by trained registered service engineers.

## Safety during use

- Remove stickers and film from the glass ceramic.
- There is the risk of burns from the appliance if used carelessly.
- Cables from electrical appliances must not touch the hot surface of the appliance or hot cookware.
- Overheated fats and oils can ignite very quickly. Warning! Fire hazard!
- Switch the cooking zones off after each use.
- Users with implanted pacemakers should keep their upper body at least 30 cm from induction cooking zones that are switched on.
- Risk of burns! Do not place objects made of metal, such as knives, forks, spoons and saucepan lids on the cooking surface, as they can get hot.

## Safety when cleaning


- For cleaning, the appliance must be switched off and cooled down.
- For safety reasons, the cleaning of the appliance with steam jet or high-pressure cleaning equipment is not permitted.

## How to avoid damage to the appliance

- The glass ceramic can be damaged by objects falling onto it.
- The edge of the glass ceramic can be damaged by being knocked by the cookware.
- Cookware made of cast iron, cast aluminium or with damaged bottoms can scratch the glass ceramic if pushed across the surface.
- Objects that melt and things that boil over can burn onto the glass ceramic and should be removed straightaway.
- Do not use the cooking zones with empty cookware or without cookware.
- To avoid damaging cookware and glass ceramics, do not allow saucepans or frying pans to boil dry.
- The ventilation gap of 5 mm between the worktop and front of the unit underneath it must not be covered.

# Description of the Appliance

## Cooking surface layout

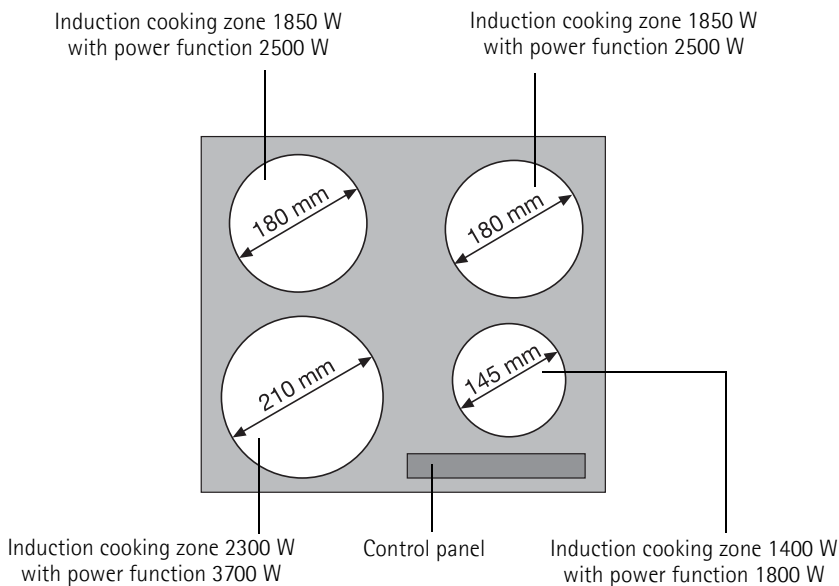


## Control panel layout

Child lock with display





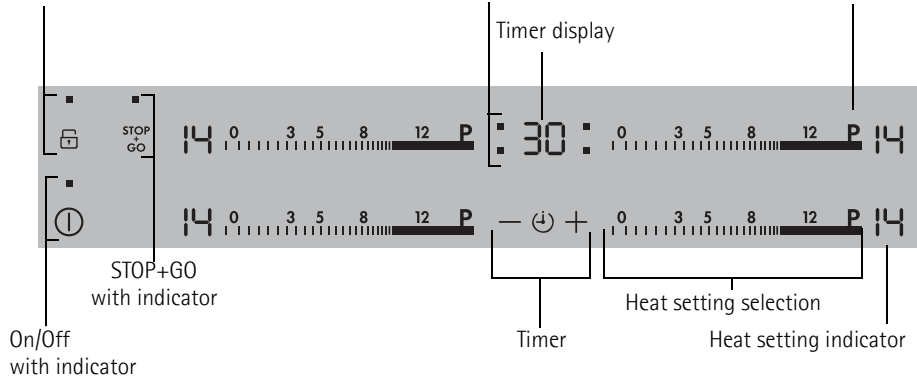


Cooking zone indicators  
Timer function

Power function










## Touch Control sensor fields

The appliance is operated using Touch Control sensor fields. Functions are controlled by touching sensor fields and confirmed by displays and acoustic signals. Touch the sensor fields from above, without covering other sensor fields.


Sensor field		Function
	On / Off	To switch the appliance on and off
	Child lock	Locking control panel for children
	Stop+Go	To switch the Keep Warm setting on/off
	Power	Switching the power function on and off
	Timer	Timer selection
	Increase settings	To increase Timer time
	Reduce settings	To reduce Timer time

## Displays

Display	Description
	Keep Warm setting STOP+GO function is set
	Heat settings To set heat settings
	Power Power function is switched on
	Fault Malfunction has occurred
	Residual heat Cooking zone is still hot
	Child safety device Lock/child safety device is engaged
	Automatic switch off Switch off is active.

## Residual heat indicator



**Warning!** Risk of burns from residual heat. After being switched off, the cooking zones need some time to cool down. Look at the residual heat indicator .



Residual heat can be used for melting and keeping food warm.




## Control bar

The control bar is a special Touch Control field.

The control bar is touched where the desired heat setting is positioned. The heat setting is shown in the display. Correct to the left or the right, if necessary.

Do not release before the desired heat setting is reached.

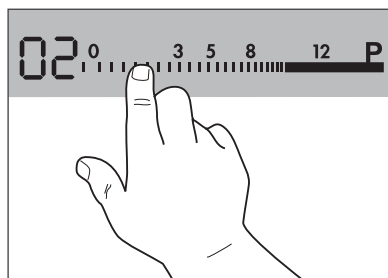

If the control bar is touched for longer than 6 seconds, a signal sounds and the appliance switches itself off.

The **induction cooking zones** create the heat required for cooking directly in the base of the cookware. The glass ceramic is merely heated by the residual heat of the cookware.

The **cooling fan** switches itself on and off depending upon the temperature of the electronics.

## Operating the appliance



Use the induction cooking zones with suitable cookware.

### Switching the appliance on and off

	Control panel	Display	Pilot light
Switch on	Touch  for 1 second	/	lights up
Switch off	Touch  for 1 second	/ none	goes out



After switching on, within approx. 10 seconds a heat setting or a function must be set, otherwise the appliance automatically switches itself off.

### Setting the heat setting

	Control bar	Display
To set the heat setting	Touch the desired heat setting, if necessary, correct to the left or the right	to  /
To switch off	Touch 0	

### Locking/unlocking the control panel

The control panel, with the exception of the "On/Off" sensor field, can be locked at any time in order to prevent the settings being changed e.g. by wiping over the panel with a cloth.

	Control panel	Display
Switch on	Touch	(for 4 seconds)
Switch off	Touch	previously set heat setting



When you switch the appliance off, the locking function is automatically switched off.

## Switching the STOP+GO function on and off

The STOP+GO function simultaneously switches all cooking zones that are switched on to the keep warm setting and then back to the heat setting that was previously set.

	Control panel	Display
To switch on	Touch <b>STOP+GO</b>	
To switch off	Touch <b>STOP+GO</b>	heat setting that was previously set (not automatic warm up function)



Timer functions are not stopped by STOP+GO.



STOP+GO locks the whole control panel except the sensor field ①.

## Using the automatic warm-up function

All cooking zones are equipped with an automatic warm-up function. When setting a heat setting using the automatic warm-up function, the cooking zone switches to full power for a certain amount of time and then automatically switches back to the heat setting set.

Step	Control panel	Display
1.	Touch <b>P</b>	
2.	Move your finger down from <b>P</b> to select the desired heat setting between  and	/ , after 5 seconds . As long as  is displayed, the appliance works at full power. After the automatic warm up is completed, the heat setting  /  is displayed again.




The length of time that the automatic warm up function operates depends on the heat setting selected.

Heat setting	Length of the automatic warm up [min:sec]
<i>1</i>	1:00
<i>2</i>	1:40
<i>3</i>	2:40
<i>4</i>	4:50
<i>5</i>	5:30
<i>6</i>	6:30
<i>7</i>	8:10
<i>8</i>	10:10
<i>9</i>	12:20
<i>10</i>	2:30
<i>11</i>	2:30
<i>12</i>	3:30
<i>13</i>	4:30
<i>14</i>	---

## Using the child safety device




The child safety device prevents unintentional use of the appliance.

### Switching on the child safety device

Step	Control panel	Display/Signal
1.	① Switch on appliance. (Do not set a heat setting.)	
2.	Touch  for 4 seconds	
The child safety device is switched on.		

### Overriding the child safety device




The child safety device can be switched off in this way for a single cooking session; it remains activated afterwards.

Step	Control panel	Display/Signal
1.	① Switch appliance on	
2.	Touch  for 4 seconds	 lights up
Until the appliance is next switched off, it can be used as normal.		





After overriding the child safety device, a heat setting or a function must be set within approx. 10 seconds, otherwise the appliance automatically switches itself off.

### Switching off the child safety device

Step	Control panel	Display/Signal
1.	① Switch appliance on	
2.	Touch  for 4 seconds	 lights up
3.	Switch appliance off.	
The child safety device is switched off.		

## Switching the power function on and off

The power function **P** makes more power available to the induction cooking zones, e.g. to bring a large quantity of water to the boil quickly. The power function is activated for 10 minutes at most. After that the induction cooking zone automatically switches back to heat setting 14.


	Control panel	Display
To switch on	Touch <b>P</b>	
To switch off	Touch a heat setting	 / 

### Power Management

The cooking zones of the cooking surface have a maximum power available to them. Two cooking zones make up a pair (see figure).

So that the Power function can always be carried out, Power Management may reduce the power of the other cooking zone in the pair

Example: heat setting 14 is selected on a cooking zone. The Power function is switched on for the cooking zone paired up with it. The Power function is performed, but heat setting 14 on one cooking zone and Power function on the other cooking zone of a pair exceeds the maximum output for both. Therefore Power Management reduces the first cooking zone that was switched on from 14 to 7, for example, and the display for this cooking zone alternates between 14 and 7 and then remains on the current maximum of 7. (Whether the display alternates between 14 and 7 or 14 and 6 or other values, depends on the appliance type and the size of the cooking zone.)

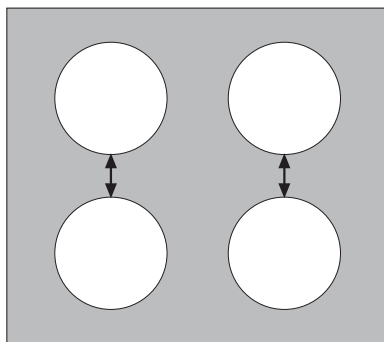

## Using the timer

Function	Condition	Outcome after the time has elapsed
<b>Automatic cut-out</b>	a heat setting is set	acoustic signal <b>00</b> flashes Cooking zone switches off
<b>Countdown timer</b>	cooking zones not in use	acoustic signal <b>00</b> flashes



If a heat setting is set on this cooking zone in addition to a countdown timer, the cooking zone is switched off after the time set has elapsed.



If a cooking zone is switched off, the timer function set is also switched off.

## Selecting a cooking zone

Step	Control panel	Display
1.	Touch  once	Pilot light of the first cooking zone flashes
2.	Touch  once	Pilot light of the second cooking zone flashes
3.	Touch  once	Pilot light of the third cooking zone flashes
4.	Touch  once	Pilot light of the fourth cooking zone flashes




If the pilot light is flashing more slowly, the heat setting can be set or modified.



If other timer functions are set, after a few seconds the shortest remaining time of all the timer functions is displayed and the corresponding pilot light flashes.

## Setting the time


Step	Control panel	Indicator
1.	Select  cooking zone	Pilot light for the cooking zone selected flashes
2.	Touch <b>+</b> or <b>—</b>	<b>00</b> to <b>99</b> minutes

After a few seconds the pilot light flashes more slowly.

The time is set.

The time counts down.


## Switching off the timer function

Step	Control panel	Indicator
1.	Select  cooking zone	Pilot light of cooking zone selected flashes faster Time remaining is displayed
2.	Touch <b>—</b>	The time remaining counts backwards to <b>00</b> .

The pilot light goes out.

The Timer function for the selected cooking zone is switched off.

## Changing the time

Step	Control panel	Indicator
1.	Select  cooking zone	Pilot light of the selected cooking zone flashes faster Time remaining is displayed
2.	Touch <b>+</b> or <b>—</b>	<b>01</b> to <b>99</b> minutes


After a few seconds, the pilot light flashes more slowly.

The time is set.

The time counts down.



## Displaying the time remaining for a cooking zone

Step	Control panel field	Display
1.	 Select cooking zone	Pilot light of the cooking zone selected flashes faster The time remaining is displayed
After a few seconds the pilot light flashes more slowly.		

## Switching off the acoustic signal

Step	Control panel field	Acoustic signal
1.	Touch 	Acoustic signal to acknowledge.
Acoustic signal stops.		

## Automatic switch off




 

### Cooking surface

- If after switching on the cooking surface, a heat setting is not set for a cooking zone within approx. 10 seconds, the cooking surface automatically switches itself off.
- If one or more sensor fields are covered by objects (a pan, etc.) for longer than approx. 10 seconds, a signal sounds and the cooking surface switches off automatically.
- If all cooking zones are switched off, the cooking surface automatically switches itself off after approx. 10 seconds.

### Control panel

- When the appliance is switched off, if one or more of the sensor fields on the control panel are covered for more than 10 seconds, an acoustic signal sounds. The acoustic signal switches itself off automatically when the sensor fields are no longer covered.

### Induction cooking zones

- In the case of overheating (e.g. when a saucepan boils dry) the cooking zone automatically switches itself off.  is displayed. Before being used again, the cooking zone must be set to  and cooled down.
- If cookware that is not suitable is used,  lights up in the display and after 2 minutes the indicator for the cooking zone switches itself off.
- If one of the cooking zones is not switched off after a certain time, or if the heat setting is not modified, the relevant cooking zone switches off automatically.  is displayed. Before being used again, the cooking zone must be set to .

Heat setting	Switches off after
1 - 3	6 hours
4 - 6	5 hours
7 - 8	4 hours
9 - 14	1.5 hours

# Tips on Cooking and Frying


## Information on acrylamides

According to the latest scientific knowledge, intensive browning of food, especially in products containing starch, can constitute a health risk due to acrylamides. Therefore we recommend cooking at the lowest possible temperatures and not browning foods too much.

## Cookware for induction cooking zones

Cookware material

Cookware material	Suitable
Steel, enamelled steel	yes
Cast iron	yes
Stainless steel	if appropriately labelled by the manufacturer
Aluminium, copper, brass	---
Glass, ceramic, porcelain	---




 Cookware for induction cooking zones is labelled as suitable by the manufacturer.

### Suitability test

Cookware is suitable for induction cooking, if ...

- ... a little water on an induction cooking zone set to heat setting 9 is heated within a short time.
- ... a magnet sticks to the bottom of the cookware.



 Certain cookware can make noises when being used on induction cooking zones. These noises are not a fault in the appliance and do not affect operation in any way.

## Bottom of the cookware

The bottom of the cookware should be as thick and flat as possible.

### Pan size

Induction cooking zones adapt automatically to the size of the bottom of the cookware up to a certain point. However the magnetic part of the bottom of the cookware must have a minimum diameter depending on the size of the cooking zone.

Diameter of cooking zone [mm]	Minimum diameter of dish base [mm]
210	180
180	145
145	120



The cookware must be placed centrally on the cooking zone.

## Tips on energy saving



Place cookware on the cooking zone before it is switched on.



If possible, always place a lid on the cookware.

## Examples of cooking applications

The information given in the following table is for guidance only.

Heat setting	Cooking-process	suitable for	Cooking time	Tips/Hints
0		Off position		
1	<b>Keeping food warm</b>	Keeping cooked foods warm	as required	Cover
1-3	<b>Melting</b>	Hollandaise sauce, melting butter, chocolate, gelatine	5-25 mins.	Stir occasionally
	<b>Solidifying</b>	Fluffy omelettes, baked eggs	10-40 mins.	Cook with lid on
3-5	<b>Simmering on low heat</b>	Simmering rice and milk-based dishes Heating up ready-cooked meals	25-50 mins.	Add at least twice as much liquid as rice, stir milk dishes part way through cooking
5-7	<b>Steaming Braising</b>	Steaming vegetables, fish braising meat	20-45 mins.	With vegetables add only a little liquid (a few table-spoons)
7-9	<b>Boiling</b>	Steaming potatoes	20-60 mins.	Use only a little liquid, e. g.: max. 1/4 l water for 750 g potatoes
		Cooking larger quantities of food, stews and soups	60-150 mins.	Up to 3 l liquid plus ingredients
9-12	<b>Gentle Frying</b>	Frying escalopes, veal cordon bleu, cutlets, rissoles, sausages, liver, roux, eggs, pancakes, doughnuts	Steady frying	Turn halfway through cooking
12-13	<b>Heavy Frying</b>	Hash browns, loin steaks, steaks, Flädle (pancakes for garnishing soup)	5-15 mins. per pan	Turn halfway through cooking
14	<b>Boiling Searing Deep frying</b>	Boiling large quantities of water, cooking pasta, searing meat (goulash, pot roast), deep frying chips		

The power function is suitable for heating large quantities of liquid.

## Cleaning and Care



**Take care!** Risk of burns from residual heat.



**Warning!** Sharp objects and abrasive cleaning materials will damage the appliance. Clean with water and washing up liquid.



**Warning!** Residues from cleaning agents will damage the appliance. Remove residues with water and washing up liquid.

### Cleaning the appliance after each use

1. Wipe the appliance with a damp cloth and a little washing up liquid.
2. Rub the appliance dry using a clean cloth.

### Removing deposits

1. Place a scraper on the glass ceramic surface at an angle.
2. Remove residues by sliding the blade over the surface.
3. Wipe the appliance with a damp cloth and a little washing up liquid.
4. Rub the appliance dry using a clean cloth.

Type of dirt	Remove		
	immedi- ately	when the appliance has cooled down	using
sugar, food containing sugar	yes	---	a scraper*
plastics, tin foil	yes	---	
limescale and water rings	---	yes	cleaner for glass ceramic or stainless steel*
fat splashes	---	yes	
shiny metallic discolouration	---	yes	

\*Scrapers and cleaners for glass ceramic and stainless steel can be purchased in specialized shops










Remove stubborn residues with a cleaner for glass ceramic or stainless steel.



Scratches or dark stains on the glass ceramic that cannot be removed do not however affect the functioning of the appliance.

## What to do if ...

Problem	Possible cause	Remedy
The cooking zones cannot be switched on or are not operating	More than 10 seconds have passed since the appliance was switched on	Switch the appliance on again.
	The lock is switched on 	Switch off the lock (See the section "Locking/unlocking the control panel")
	The child safety device is switched on 	Deactivate child safety device (See the section "Child safety device")
	Several sensor fields were touched at the same time	Only touch one sensor field
	Automatic switch-off has been triggered	Remove any objects (pans, etc.) that are lying on the control panel. Switch appliance on again
	There is water on the control panel or the control panel is covered with fat splashes	Wipe the control panel
	STOP+GO is activated 	Switching off STOP+GO
Acoustic signal sounds when appliance is switched off	The control panel is wholly or partly covered by objects.	Remove objects.
The residual heat indicator is not displaying anything	The cooking zone was only on for a short time and is therefore not hot	If the cooking zone is supposed to be hot, call the Customer Service Department.
Repeated acoustic signal (6x), appliance switches off	One or more sensor fields have been covered for longer than 10 seconds	Uncover sensor field
Acoustic signal sounds and appliance switches itself on and then off again; after 5 seconds another acoustic signal sounds	The On/Off sensor field has been covered up, e.g. by a cloth	Do not place any objects on the control panel
Display is switching between two heat settings	Power management is reducing the power of this cooking zone	See the section "Switching the power function on and off"

Problem	Possible cause	Remedy
 lights up	Unsuitable cookware	Use suitable cookware
	No cookware on the cooking zone	Place cookware on the cooking zone
	The diameter of the bottom of the cookware is too small for the cooking zone	Move onto a smaller cooking zone
		Use suitable cookware
 lights up	Overheating protection for the cooking zone has been triggered	Switch off the cooking zone. Switch the cooking zone on again
	Automatic switch-off has been triggered	Switch appliance off. Switch appliance on again
 and number are displayed	Electronics fault	Disconnect the appliance from the electrical supply for a few minutes (Take the fuse out of the house's wiring system) If after switching on again,  is displayed again, call the customer service department

**If you are unable to remedy the problem by following the above suggestions, please contact your dealer or the Customer Care Department.**



**Warning!** Repairs to the appliance are only to be carried out by qualified service engineers. Considerable danger to the user may result from improper repairs.



If the appliance has been wrongly operated, the visit from the customer service technician or dealer may not take place free of charge, even during the warranty period.



# Disposal




## Packaging material

The packaging materials are environmentally friendly and can be recycled. The plastic components are identified by markings, e.g. >PE<, >PS<, etc. Please dispose of the packaging materials in the appropriate container at the community waste disposal facilities.



## Old appliance

The symbol  on the product or on its packaging indicates that this product may not be treated as household waste. Instead it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. For more detailed information about recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product.

# Installation Instructions



## Safety instructions

Warning! This must be read!

The laws, ordinances, directives and standards in force in the country of use are to be followed (safety regulations, proper recycling in accordance with the regulations, etc.)

Installation may only be carried out by a qualified electrician.

The minimum distances to other appliances and units are to be observed.

Anti-shock protection must be provided by the installation, for example drawers may only be installed with a protective floor directly underneath the appliance.

The cut surfaces of the worktop are to be protected against moisture using a suitable sealant.

The sealant seals the appliance to the work top with no gap.

Do not use silicon sealant between the appliance and the work top.

When building in, protect the underside of the appliance from steam and moisture, e.g. from a dishwasher or oven.

Avoid installing the appliance next to doors and under windows. Otherwise hot cookware may be knocked off the rings when doors and windows are opened.



## Risk of injury from electrical current.

- The electrical mains terminal is live.
- Make electrical mains terminal free of voltage.
- Follow connection schematic.
- Observe electrical safety rules.
- Ensure anti-shock protection by installing correctly.
- The appliance must be connected to the electrical supply by a qualified electrician.



**Risk of injury from electrical current.**



- Loose and inappropriate plug and socket connections can make the terminal overheat.
- Have the clamping connections correctly installed by a qualified electrician.
- Use strain relief clamp on cable.
- In the event of single-phase or two-phase connection, the appropriate mains cable of type H05BB-F Tmax 90°C(or higher) must be used.
- If this appliance's mains cable is damaged, it must be replaced by a special cable (type H05BB-F Tmax 90°C; or higher). The latter is available from the Customer Care Department.



A device must be provided in the electrical installation which allows the appliance to be disconnected from the mains at all poles with a contact opening width of at least 3 mm.

Suitable isolation devices include line protecting cut-outs, fuses (screw type fuses are to be removed from the holder), earth leakage trips and contactors.



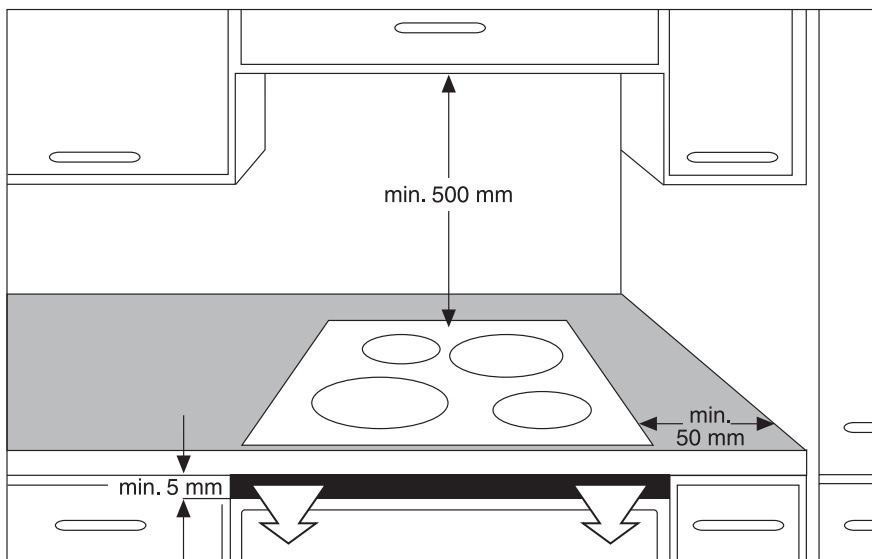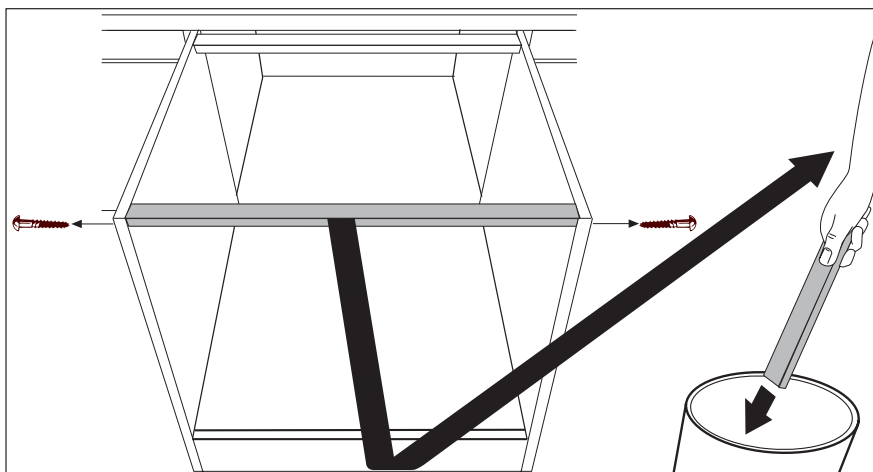
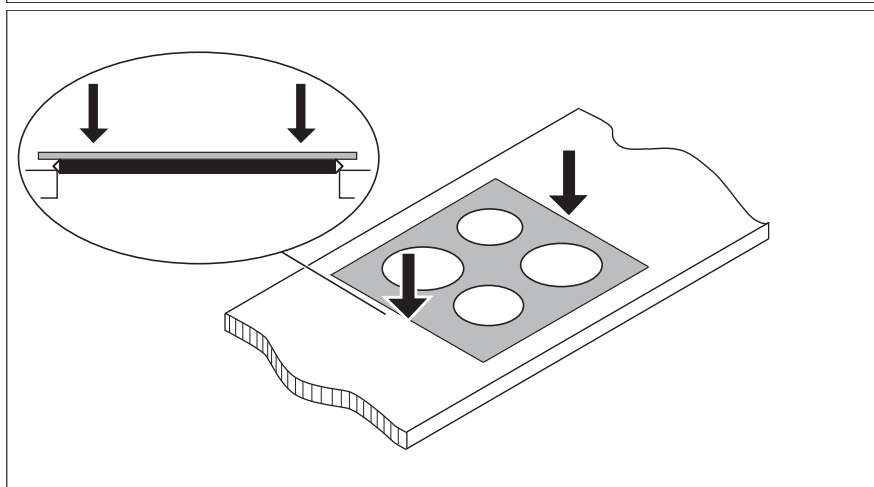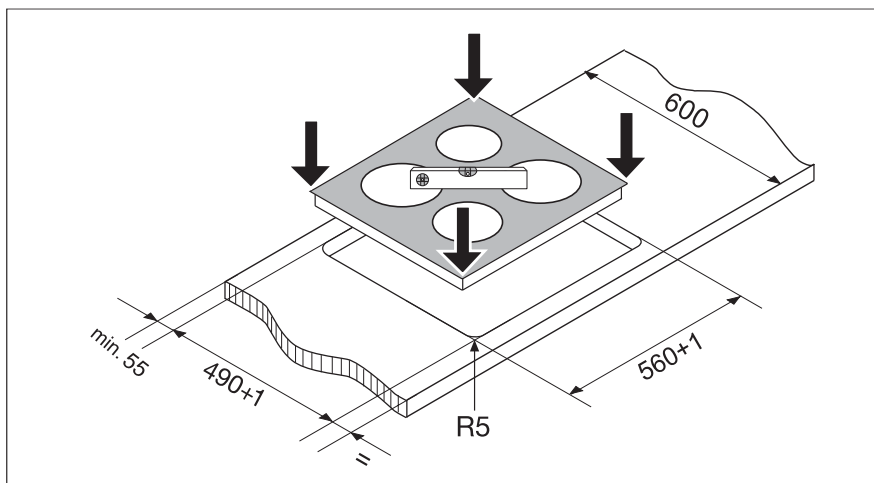
## Assembly / Montage / Montage

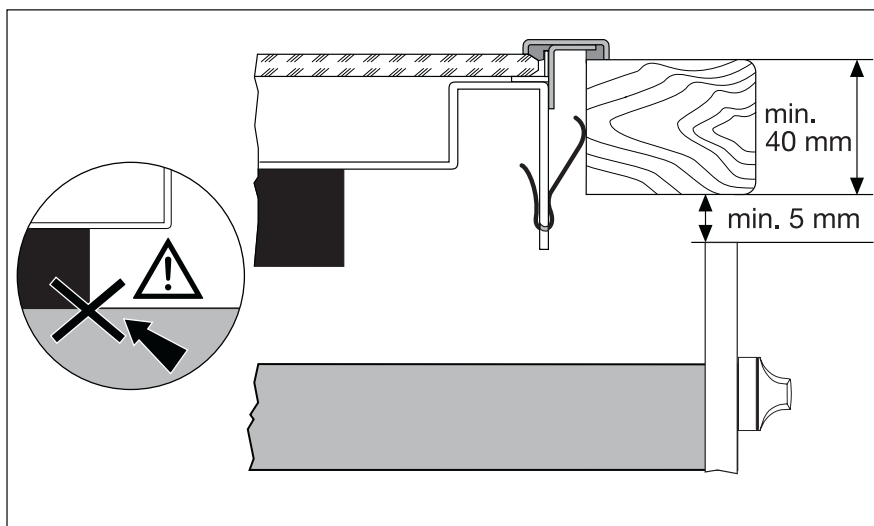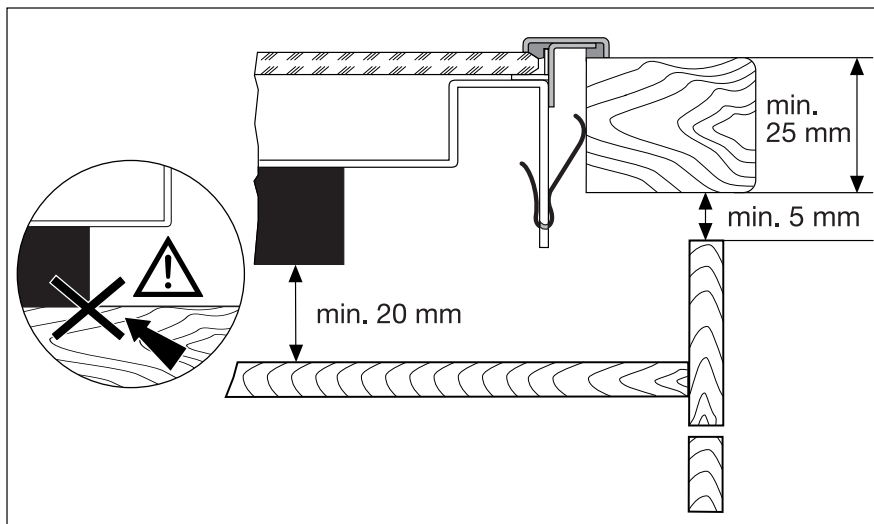





## Rating Plate / Plaque signalétique / Typeplaatje

Modell 68031K-MN		Prod.Nr. 949 592 871	
Typ 55GAD80AG	230 V	50 Hz	7,4
Made in Germany	Ser.Nr. ....	7,4 kW	
AEG-ELECTROLUX		 	

# Guarantee/Customer Service Centres

## EURO-LINE APPLIANCES

LENGTH OF WARRANTY	EURO-LINE WILL PAY FOR:
<b>TWO YEAR FULL WARRANTY</b> from original date of purchase, including parts and labour, to the first purchaser of this appliance	Replacement parts and/or labour to repair defects in materials or workmanship. Service must be provided by an authorized Euro-Line company (unless advised otherwise).

**THIS GUARANTEE DOES NOT COVER COMMERCIAL USE.**

The name Euro-Line Appliances, for service matters, incorporates work performed by authorized service agents or service companies.

**EXCEPTIONS:**

**EURO-LINE APPLIANCES WILL NOT PAY FOR THE FOLLOWING SERVICE CALLS:**

- 1. To install or correct the installation of an appliance
- 2. To instruct the use of an appliance.
- 3. To replace house fuses, re-set circuit breakers or correct house wiring.
- 4. To correct house plumbing.
- 5. To clean drains, filters or garbage disposers.
- 6. To repair an appliance if it fails due to misuse or abuse.

**EURO-LINE APPLIANCES WILL NOT PAY WHEN THE FOLLOWING OCCURS:**

- 1. Damage resulting from fires, acts of God, alteration, improper installation, or installation not in accordance with local building codes.
- 2. Pickup or delivery of major appliances requiring service. The appliances are designed to be repaired in the home. However, Euro-Line will not be responsible for travelling and labour costs if the customer lives in excess of 50 km/30 miles, or if the travel time is in excess of 30 minutes from the nearest service center. Any excess to this will not be covered by the warranty.

In no event, will Euro-Line be responsible for incidental or consequential damages. For warranty service and parts, contact **EURO-PARTS**. Service will be provided during normal business hours. Should you have a service problem that is not resolved locally, contact:

**For Service and Parts Contact:**



EURO-PARTS, USA	EURO-PARTS, CANADA	EURO-LINE APPLIANCES
Tel: 1-800-561-4614	Tel: 1-800-678-8352	1-800-421-6332
Fax: 1-519-528-5001	Fax: 1-519-528 5001	Tel. Direct: 1-905-829-3980
		Fax: 1-905-829-3985

## User Instructions & Installation Manual

### Service & Repair

To save you time and money please have the following information ready in case you have to call for service:

- Name of the dealer from whom you purchased the appliance.
- Model number (shown on the rating plate)
- Serial number (shown on the rating plate)
- Date of purchase.

You should also retain the original purchase receipt to support any claim made under the warranty. (We suggest you staple the receipt to this page).

**If service is required, contact the Service Center:**

EURO-PARTS, CANADA	EURO-PARTS, USA
Tel: 1 800 678 8352	Tel: 1-800-561-4614
Fax: 1-519-528-500	Fax: 1-519-528-5001

**DISTRIBUTED BY:** EURO-LINE APPLIANCES 2278 SPEERS ROAD OAKVILLE,  
ONTARIO CANADA L6L 2X8 1-800-421-6332 Tel: 905-829-3980 Fax:  
905-829-3985 [www.euro-line-appliances.com](http://www.euro-line-appliances.com)